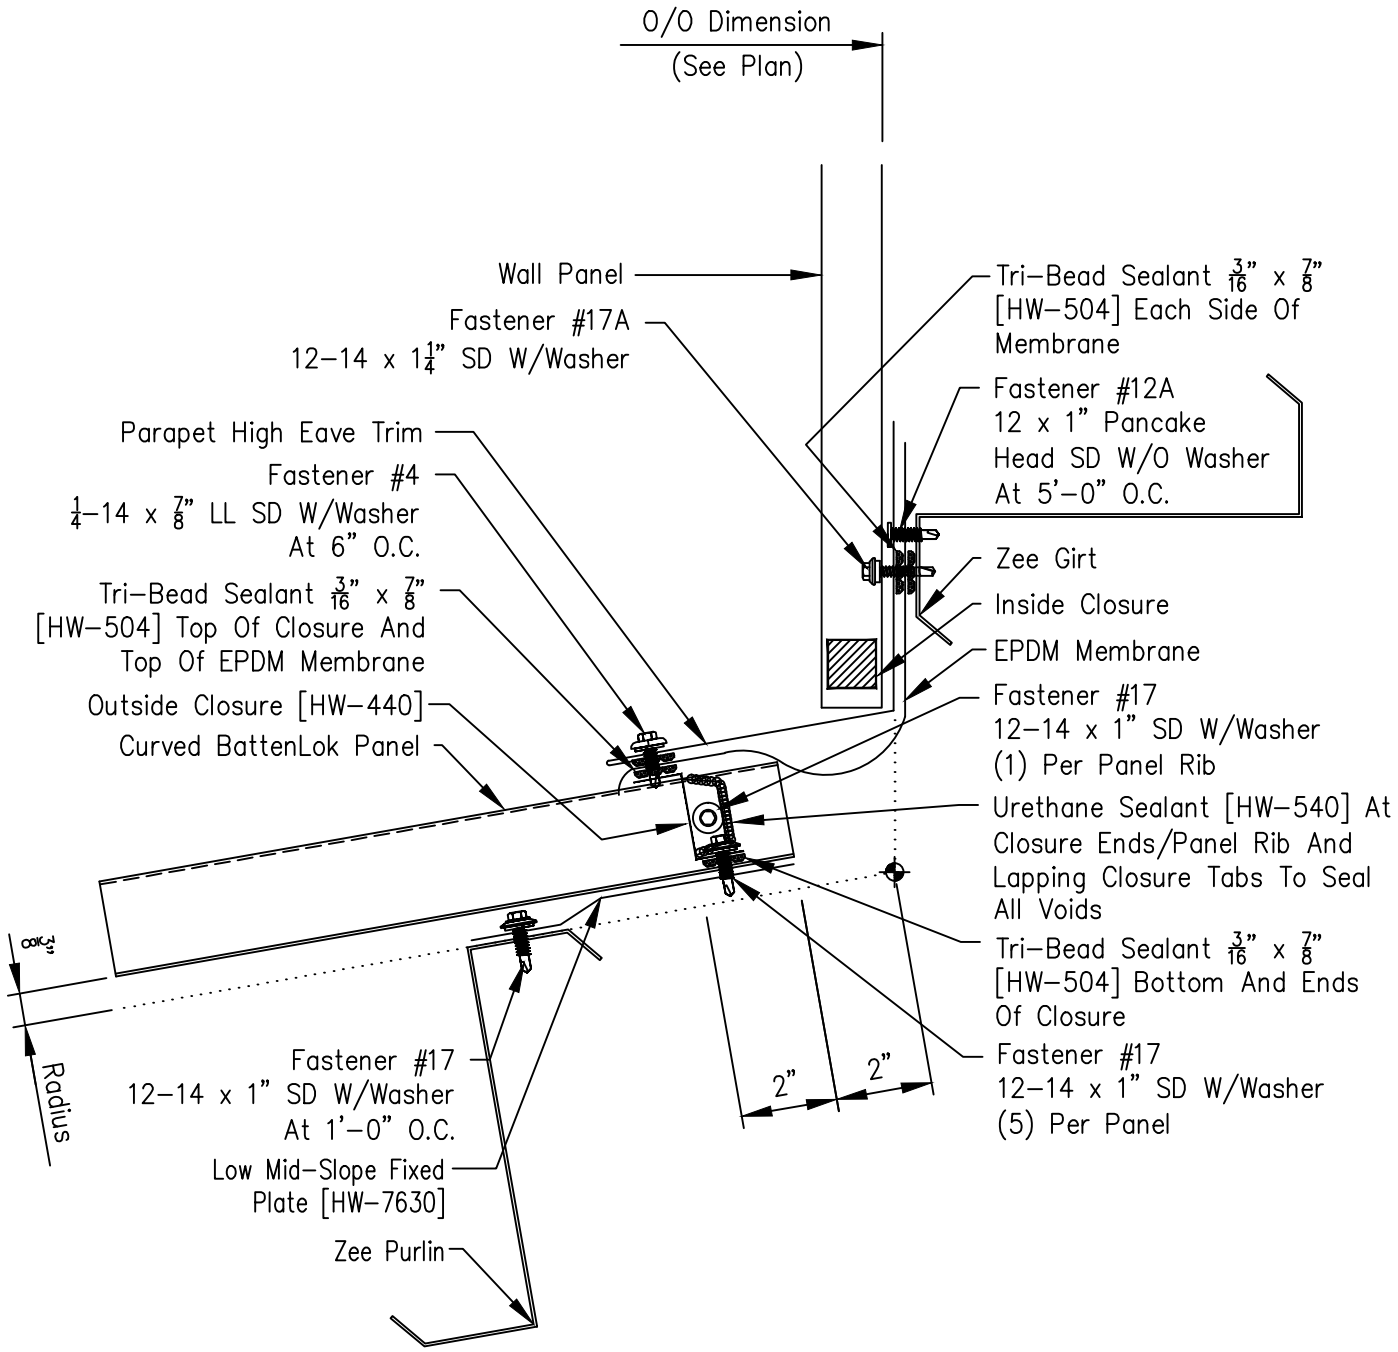
O/O Dimension
(See Plan)
Wall Panel
Fastener #17A
12–14 x 1¼" SD W/Washer
Parapet High Eave Trim
Fastener #4
¼–14 x ⅞" LL SD W/Washer
At 6" O.C.
Tri–Bead Sealant 3/16" x ⅞"
[HW–504] Top Of Closure And
Top Of EPDM Membrane
Outside Closure [HW–440]
Curved BattenLok Panel
Tri–Bead Sealant 3/16" x ⅞"
[HW–504] Each Side Of
Membrane
Fastener #12A
12 x 1" Pancake
Head SD W/O Washer
At 5'–0" O.C.
Zee Girt
Inside Closure
EPDM Membrane
Fastener #17
12–14 x 1" SD W/Washer
(1) Per Panel Rib
Urethane Sealant [HW–540] At
Closure Ends/Panel Rib And
Lapping Closure Tabs To Seal
All Voids
Tri–Bead Sealant 3/16" x ⅞"
[HW–504] Bottom And Ends
Of Closure
Fastener #17
12–14 x 1" SD W/Washer
(5) Per Panel
3/8"
Radius
Fastener #17
12–14 x 1" SD W/Washer
At 1'–0" O.C.
Low Mid–Slope Fixed
Plate [HW–7630]
Zee Purlin
2"
2"